


HOW TO SIZE

INFLOW PROTECTOR™ INSERTS

Measure each and every manhole for which you are ordering inserts, unless you are absolutely sure of dimensions. Your order will be produced to your supplied dimensions. Errors in instructions received from you may result in unusable inserts for you because they are non-returnable. --If you have any questions concerning the insert dimensions please call: (800) 442-7575.

The drawings below illustrate the required measurements

The *Style* of insert (IP-1 or IP-2) is determined by the the cover configuration. *Style IP-1* inserts are for manhole covers with an essentially flat underside. *Style IP-2* inserts are designed for deeper covers - so the *C and D Dimensions* must be provided.

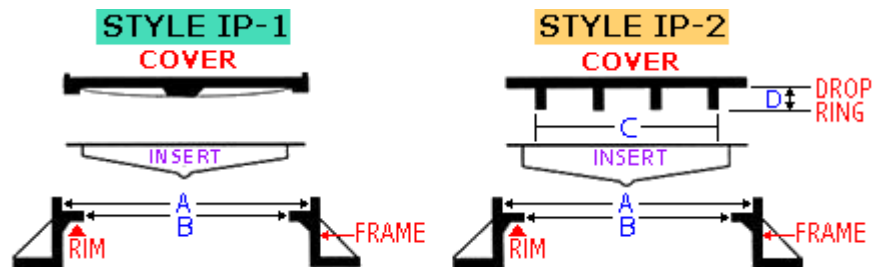

- A. Manhole Frame Diameter (flat bearing surface)
- B. Inside Frame Diameter (clear opening)
- C. Drop Ring Diameter
- D. Drop Ring Depth (from cover underside, outside edge)

